

STANDOFF HARDWARE

CAP AND BARREL INSTALLATION INSTRUCTIONS

Included in your installation kit:



4 Easy-to-follow Installation Steps:


1. Use the flat spots pre-machined in your panel for your hardware locations.

2. Select an anchor suitable for your substrate and pre-drill holes and tap the anchor flush with the substrate.

3. Drive your combination screws into the wall anchor and tighten barrels against the substrate surface.

4. Screw threaded studs into your barrels, then place your panel in position and thread on caps until snug.

TIP: We recommend 3/8" holes in your material to give you more freedom for aligning the panels.

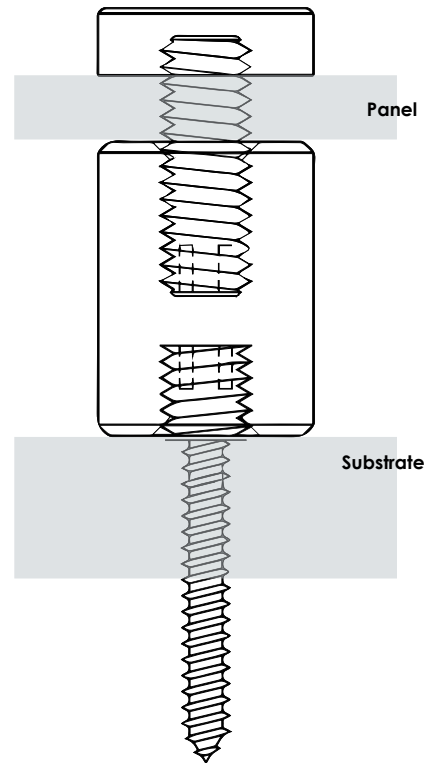

NOTE: Not all walls are plumb, square nor flat. Modifications may be necessary. It is your responsibility to determine the best installation method for your project based upon site conditions. It is the sole responsibility of the installer to meet all building codes.