

ZCLIP HARDWARE

TRACK INSTALLATION INSTRUCTIONS

ZClip Hardware Details

96" x 1 3/8" undrilled ZClip tracks

3/8" lip to engage panels

Screws are NOT included with ZClip Hardware due to variation in pattern depths



4 Easy-to-follow Installation Steps:



1. Determine orientation of panel (horizontal or vertical) and position ZClip in the desired location on the back of the panel, ensuring they are level.

2. Pre-select screw length that does not exceed the thickness of your pattern. Attach ZClip to the back of each panel at the top and bottom drilling into the highest point of texture.

3. Mark ZClip locations with chalk or laser on the wall and attach with fasteners suited for your substrate.

4. Install panel by holding against wall and lowering into place to engage the ZClip. Ensure the ZClip is engaged before releasing panel.

TIP: You will need a minimum of 1/2" clearance above the finish height to accommodate the 3/8" lift required to engage panels. Also, on gypsum board walls where studs are not available, the use of appropriate screw anchors is required.

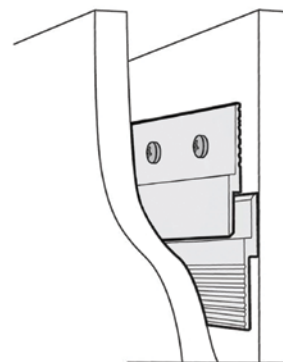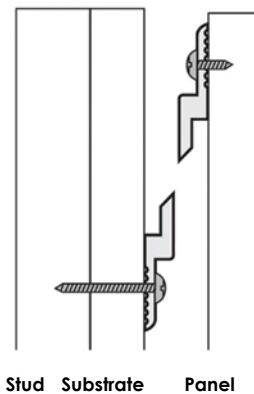

NOTE: Not all walls are plumb, square nor flat. Modifications may be necessary. It is your responsibility to determine the best installation method for your project based upon site conditions. ZClip installation is not recommended for all patterns due to panel thickness. It is the sole responsibility of the installer to meet all building codes.