

texture solutions

The world is not flat so why should our surfaces be? We offer a wide variety of deeply embossed texture patterns to add depth, dimension and drama to your interiors. Choose from small to large scale patterns with an assortment of 3D laminate finishes for endless texture options. And, since our patterns repeat from seam to seam, there is no end to how far your texture can go. Because we design everything we make, take advantage of our two week lead time and begin your life in 3D.

SPECIFICATION

CORE	PREMIUM MDF OR FIRE RATED MDF
CORE THICKNESS	3/4" AND 1 1/8"
PATTERNS	24 CLASSIC COLLECTION (3/4") 12 ELEVATE COLLECTION (1 1/8") 09 GRANDE COLLECTION (1 1/8")
FINISH	3D LAMINATE COLORS PAINT GRADE FIELD PAINTED
SIZE	48" x 96"
WEIGHT	VARIES BY PATTERN
FIRE RATING	CLASS A ASTM - E84 OR CLASS C
LEAD TIME	2 WEEKS
WARRANTY	2 YEARS

TOLERANCES

3D Wall Panels are available in standard 4'x8' panels or customized and cut to size. All dimensions and squareness are subject to a 3/16"

Each panel comes with a Melamine backer. Natural bow or warp is common to all wood products. Please compensate with proper installation

3D Wall Panels, like all wood products, will expand and contract nominally with fluctuations in moisture levels. Wood products have a potential expansion of +/- 0.33%. 3D Wall Panels will grow in high humidity conditions and shrink in low level humidity conditions. Controlled environments with maintained humidity levels of 25 - 55% is recommended. Humidity below 20% or above 80% may cause panel

MAINTENANCE



3D Wall Panels should be dusted and cleaned occasionally to prevent dirt build-up. Stains should be removed with a warm diluted soap solution if necessary in combination with a non-abrasive cleaning sponge. Common cleaning products such as Windex, Simple Green, Fantastik, Formula 409 or 10:1 Water/Bleach solution are acceptable. After cleaning, the surface should be rinsed with clean water and dried with a soft non-abrasive cotton cloth. To test the suitability of a cleaning product, apply to an inconspicuous area to prevent any damage to the surface.


STORAGE & HANDLING

3D Wall Panels should be stored flat and in an HVAC controlled environment of 65 - 75° F (18 -24° C) with relative humidity levels of 25 - 55% for at least 48 hours prior to installation. Installation areas must be enclosed and weatherproofed before installation commences.




texture solutions

PATTERNS | CLASSIC COLLECTION

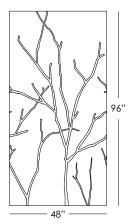


ALBERO

Pattern Direction: Vertical Only Seam Repeat: Horizontal Only

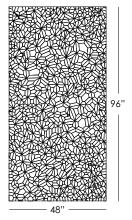


CARTA

Pattern Direction: None Seam Repeat: Horizontal and Vertical




96'



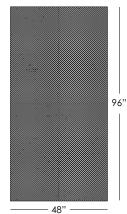

BLOCCO

Pattern Direction: Horizontal or Vertical Seam Repeat: Horizontal and Vertical

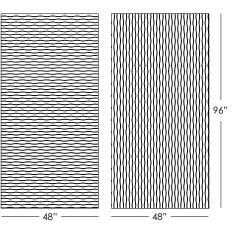


COLARE

Pattern Direction: Horizontal and Vertical Seam Repeat: Horizontal and Vertical




Pattern Direction: Horizontal or Vertical Seam Repeat: Horizontal and Vertical

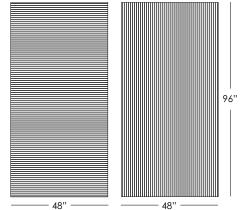

COLLE

Pattern Direction: Horizontal and Vertical Seam Repeat: Horizontal and Vertical

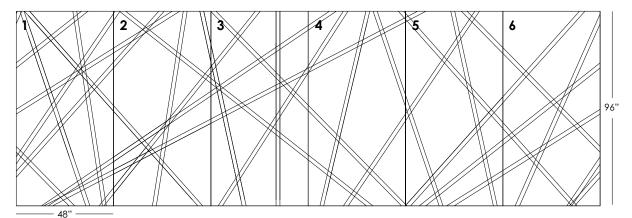


COLONNA

Pattern Direction: None


Seam Repeat: Horizontal Only repeated every six panels. Panels must be installed in sequence 1-6 and so on. Vertical pattern continuation is available upon request.

PATTERNS | CLASSIC COLLECTION (CONTINUED)

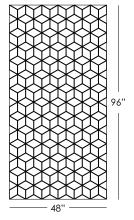


CUBO

Pattern Direction: None Seam Repeat: Horizontal Only

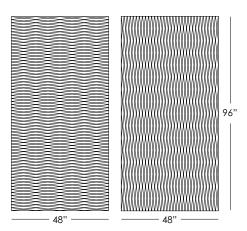


GEMMA

Pattern Direction: Horizontal or Vertical Seam Repeat: Horizontal and Vertical

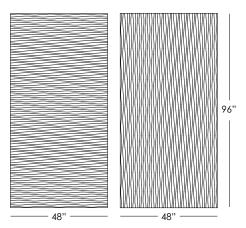


ONDA TWO

Pattern Direction: Horizontal or Vertical Seam Repeat: Horizontal and Vertical

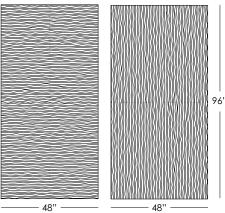


Seam Repeat: Horizontal and Vertical

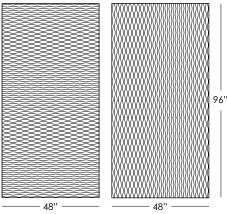

LISCIO

Pattern Direction: Horizontal or Vertical Seam Repeat: Horizontal and Vertical

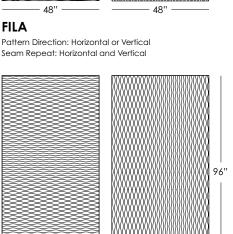

ONDA ONE


48"

Pattern Direction: Horizontal or Vertical

Seam Repeat: Horizontal and Vertical

FIUME

Pattern Direction: Horizontal or Vertical Seam Repeat: Horizontal and Vertical

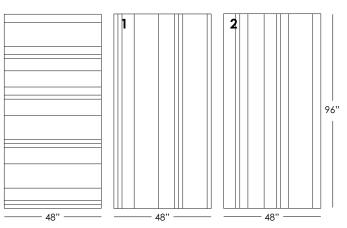


ORLO

Pattern Direction: Horizontal or Vertical

Seam Repeat: Horizontal and Vertical. In vertical direction, panels must be installed in sequence 1-2-1-2... and so on for continuous pattern.


96"

PATTERNS | CLASSIC COLLECTION (CONTINUED)

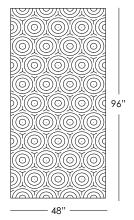


PIOGGIA

Pattern Direction: None

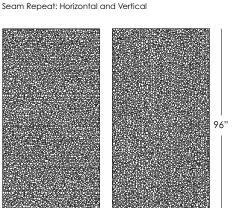


SCULTURA

Pattern Direction: Horizontal or Vertical Seam Repeat: Horizontal and Vertical

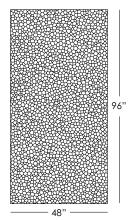


SPACCATO

Pattern Direction: None Seam Repeat: Horizontal and Vertical

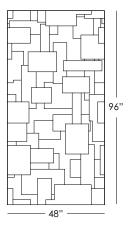


SALDARE

Pattern Direction: None Seam Repeat: Horizontal and Vertical

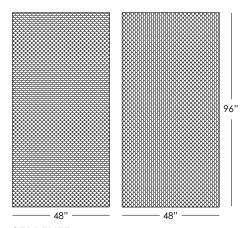


SERPENTE

Pattern Direction: Horizontal or Vertical Seam Repeat: Horizontal and Vertical




STRISCIA

Pattern Direction: Horizontal or Vertical Seam Repeat: Horizontal and Vertical

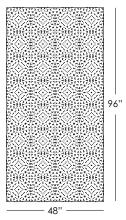

SCOLPITO

Pattern Direction: None Seam Repeat: Horizontal and Vertical

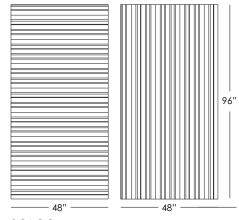


SOLCO

Pattern Direction: Horizontal or Vertical Seam Repeat: Horizontal and Vertical



TURBINE


Pattern Direction: Horizontal or Vertical Seam Repeat: Horizontal and Vertical






texture solutions

PATTERNS | ELEVATE COLLECTION

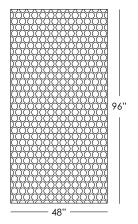


APE

Pattern Direction: None Seam Repeat: Horizontal and Vertical

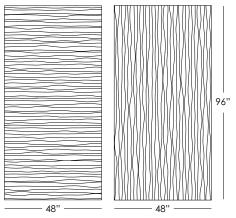


ONDATA

Pattern Direction: Horizontal or Vertical Seam Repeat: Horizontal and Vertical

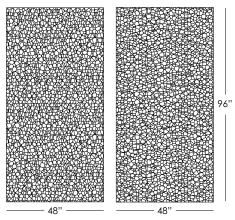


STATUA

Pattern Direction: Horizontal or Vertical Seam Repeat: Horizontal and Vertical

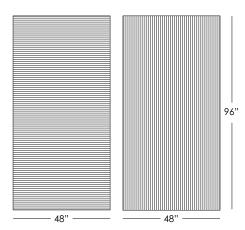


INCAVO

Pattern Direction: Horizontal or Vertical Seam Repeat: Horizontal and Vertical

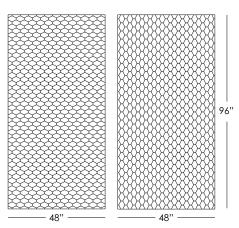


SCALA

Pattern Direction: Horizontal or Vertical Seam Repeat: Horizontal and Vertical

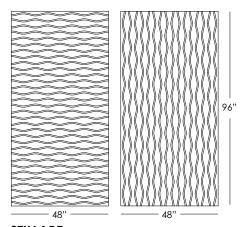


STILLARE

Pattern Direction: Horizontal or Vertical Seam Repeat: Horizontal and Vertical

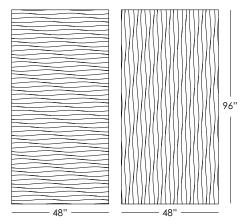


OCEANO

Pattern Direction: Horizontal or Vertical Seam Repeat: Horizontal and Vertical

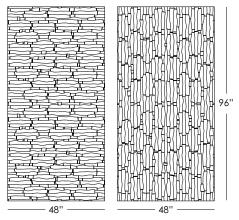

SCALPELLO

Pattern Direction: Horizontal or Vertical Seam Repeat: Horizontal and Vertical

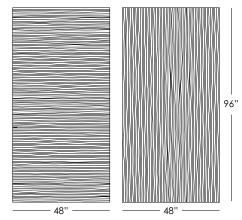


STRISCIONE

Pattern Direction: Horizontal or Vertical Seam Repeat: Horizontal and Vertical




PATTERNS | ELEVATE COLLECTION (CONTINUED)

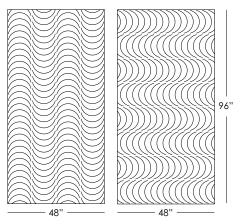


SUONO

Pattern Direction: Horizontal or Vertical Seam Repeat: Horizontal and Vertical

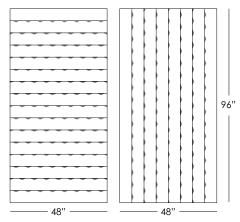


TESSERE

Pattern Direction: Horizontal or Vertical Seam Repeat: Horizontal and Vertical

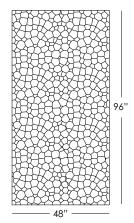


VETRINO

Pattern Direction: None Seam Repeat: Horizontal and Vertical

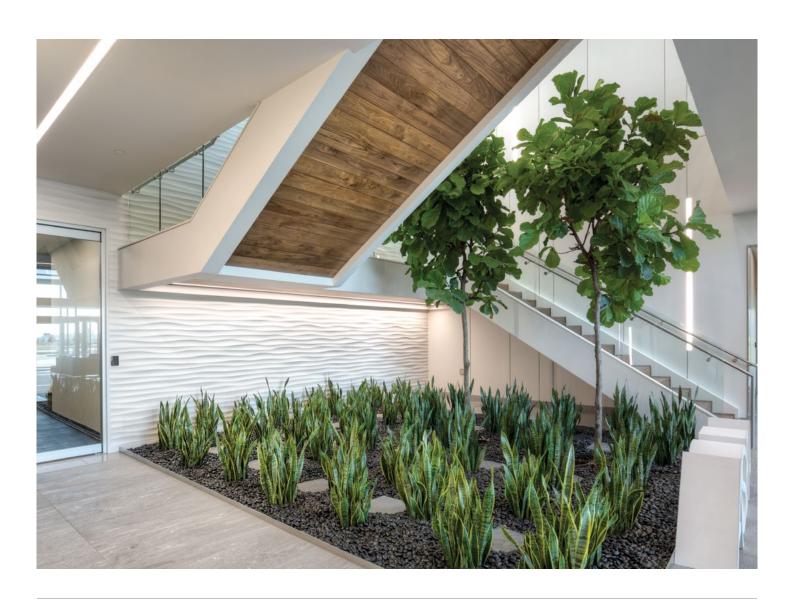


texture solutions

PATTERNS | GRANDE COLLECTION

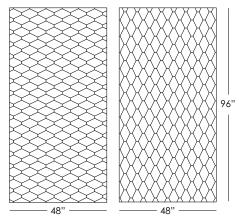


BLOCCATO

Pattern Direction: Horizontal or Vertical Seam Repeat: Horizontal and Vertical

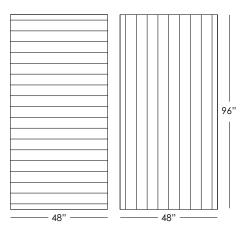


FLAUTO

Pattern Direction: Horizontal or Vertical Seam Repeat: Horizontal and Vertical

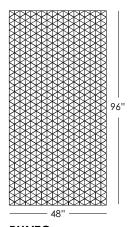


PUNTO

Pattern Direction: None Seam Repeat: Horizontal and Vertical

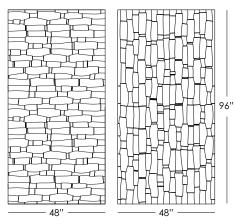


CESELLATO

Pattern Direction: Horizontal or Vertical Seam Repeat: Horizontal and Vertical

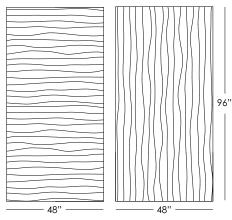


MARE

Pattern Direction: Horizontal or Vertical Seam Repeat: Horizontal and Vertical

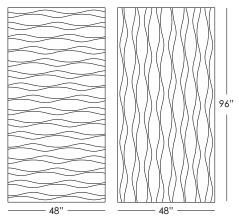


SCIVOLO

Pattern Direction: Horizontal or Vertical Seam Repeat: Horizontal and Vertical

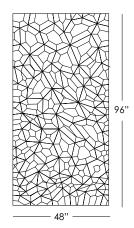


DISTRUTTO

Pattern Direction: None Seam Repeat: Horizontal and Vertical

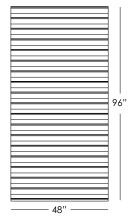

PIEGA

Pattern Direction: Horizontal Only Seam Repeat: Horizontal and Vertical

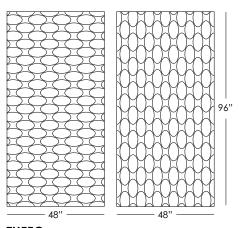

TUFFO

Pattern Direction: Horizontal or Vertical Seam Repeat: Horizontal and Vertical



FINISH

3D LAMINATE

34 COLORS SOLID | METALLIC | WOOD GRAIN | HIGH GLOSS MELAMINE BACKER

thermoformed decorative surface that is cleanable and durable. Please note: Delamination will occur when 3D laminated Wood grain will always run parallel to the 96"

3D Wall Panels can also be ordered unfinished to be painted in the field. Please contract a licensed professional and follow all local building codes and requirements.


CLEAR MAPLE

CHERRY BLOSSOM

TURMALIN MATTE

BRUSHED STEEL HG

ROCK CONCRETE





BLONDE MAPLE



SUMMERFLAME



LAUSANNE



BLACK



SAHARA STONE





PORTUNA LIGHT



CANDLELIGHT



AMATI WALNUT



UMBRA MATTE



BRUSHED ALUMINUM



RAW MDF



GLACIER WHITE



OAK ALABASTER



SALINAS OAK



OAK GIBRALTAR



GAUNTLET GREY



CELADON



MATTE WHITE



ANTIQUE WHITE



OAK PALOMINO



CHOCOLATE PEAR



SIENA MATTE





WHITE HG



ALMOND



NATURAL WALNUT



PORTUNA DARK



SHARK GREY



FASHION GREY



FINISH CONTINUED

PAINT GRADE

RAW MDF TILES MELAMINE BACKER

Soelberg does not provide factory paint finished 3D Wall Panels. Field finishing should be performed by a licensed professional. Professional grade primer and paint are recommended using spray finish.

COLOR CONSISTENCY

Paint Grade unfinished MDF 3D Wall Panels will not have consistent color from panel to panel as they are made using recycled | recovered wood products. It is not recommended to leave panels unfinished or simply clear coat.



INSTALLATION

To achieve pattern continuation with full sized panels, 3D Wall Panels must be installed in the correct orientation with constant orientation from panel to panel. Do not ever cut interior panel edges as this will disrupt pattern continuation. If trimming is necessary, always cut the outer edge of the panels.

When installing cut-to-size panels, follow numeric order of labels attached to the back of the panel and the corresponding installation drawing.

DIRECT SCREW ATTACHMENT

UNFINISHED | PAINT GRADE PANELS ONLY

3D Wall Panels may be attached to the wall by screwing directly into the face of unfinished panels. Construction mastic or industrial grade adhesive should also be used to supplement the screws. Screw holes in the panel should be pre-drilled and countersunk. Upon attachment to the wall, the holes should be filled with a non-shrinking filler and sanded prior to painting.

ADHESIVE

UNFINISHED OR 3D LAMINATED PANELS

3D Wall Panels may be attached directly to the wall using industrial grade adhesive or construction mastic such as Liquid Nails or TiteBond. The back of the panels and substrate should be wiped clean with a damp cloth prior to applying adhesive. Ensure pattern continuation and panel orientation prior to applying adhesive. Apply a generous amount to the back of the panel. Press surfaces together within 10 minutes and apply pressure across the entire surface of the panel especially at the edges. Clamp, tape or brace the panel to substrate if necessary until adhesive has set, typically 4 to 6 hours for porous


Note: not all walls are plumb, square nor flat. Modifications may be necessary. It is your responsibility to determine the best installation method for your project based upon site conditions. It is the sole responsibility of the installer to meet all building codes.





INSTALLATION CONTINUED

ZCLIP HARDWARE


To install 3D Wall Panels to the wall using Zclip hardware, a track of Zclip must first be attached to the back of each panel. Zclip should be cut to the length of the panel and special attention should be considered with regards to the length and size of the screws and where the screws are placed so as not to impact the 3D laminate finished face.

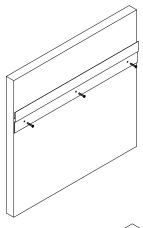

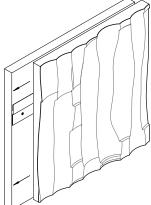

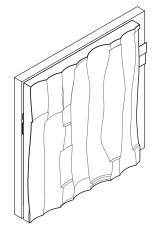

A minimum of three rows of Zclip hardware are necessary per every 8' tall panel. Rows of hardware should be situated at the top and bottom of each panel with additional rows evenly spaced between them. Corresponding Zclip should also be attached to the substrate at the same location of each panel.

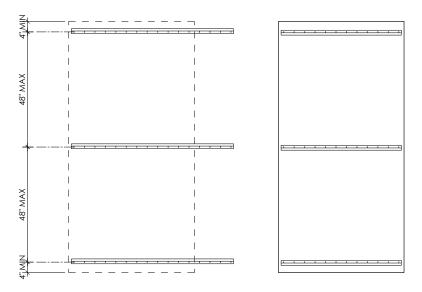

With 8' long Zclip hardware, a tighter butt joint is achieved when panels share the length of the substrate attached hardware.

