

MUTO | CARE INSTRUCTIONS


Soelberg's MUTO Acoustic Solutions are manufactured from PET core material. PET is a material that is widely accepted by health authorities as a safe plastic which is one of the reasons it is so commonly used in food and beverage packaging. Similar to glass, it is hygienic and generally resistant to attack by bacteria and other microorganisms.

CLEANING AND CARE

- Vacuum to remove dirt and dust.
- Remove spills and spots immediately using a damp clean cloth.
- For mild stains: Dab Soelberg MUTO material with a clean, soft white cloth dampened with a mild solution of liquid detergent and warm water. Repeat using only clean water, then pat dry with a lint free cloth.
- Avoid using wax polishes, solvents or concentrated abrasives to clean MUTO.
- For more difficult stains: Dampen a soft white cloth with a solution of household bleach (10% bleach | 90% water) to clean MUTO. Dab gently. Repeat using only a clean, water dampened cloth to remove bleach concentration. Then, pat dry with a lint free cloth.
- Always test in an inconspicuous area first. If care instructions do not deliver the expected results, cease cleaning and contact a Soelberg representative immediately.



MUTO Texture Panels

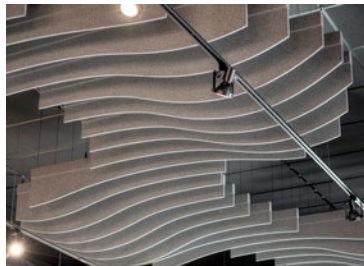

MUTO Ceiling Baffles




MUTO Divider Panels



MUTO Desk Dividers



MUTO Print Panels

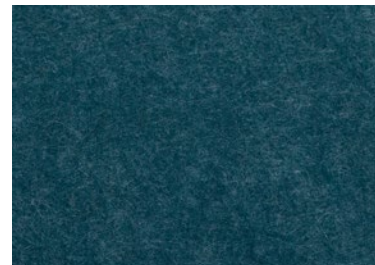

MUTO Slab Panels